


DSK-OPT004

This Wire Set can not be used without the Main Unit of DSPARK MAX sold separately.


Typical Application	CC	Car Model	Engine Model	Production Year/Month
SUPRA	3000	JZA80	2JZ-GTE	'97 9~

- ① Take off the battery terminals of both Plus and Minus. Then remove the engine head cover and any other obstacle part for taking off the Ignition Coils.

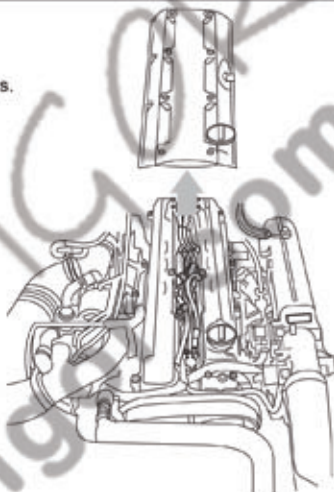

- ② Among the Six cylinders, there are 3 cylinders with Ignition Coil. The Wire Set must be installed for those three coils. Install the Wire Set between original coil and coupler firmly as illustrated. Take the same way for the remaining coils.

※The grounding wire for coil is not necessary for this car model because of the system.

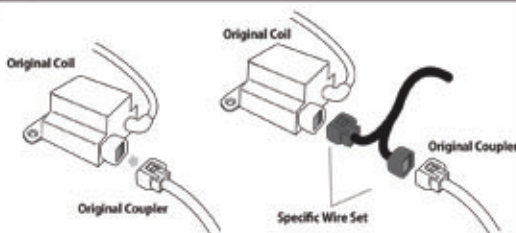

- ③ After fixing the specific Wire Set with coils, the remaining coupler of wire set to be connected with the Main Unit. Connection of the wire set with the Main Unit is as shown in the installation manual of DSPARK MAX Main Unit sold separately.

DSK-OPT004 TOYOTA 丰田

LEXUS 凌志

